




Pritschenbefestigung für CEMbox 400I und 750I

D	Pritschenbefestigung für CEMbox 400I und 750I	Deutsch	2 - 3
GB	Vehicle mounting kit for CEMbox 400I and 750I	English	2 - 3
F	Fixation au plateau pour CEMbox PO 400I et 750I	Français	2 - 3

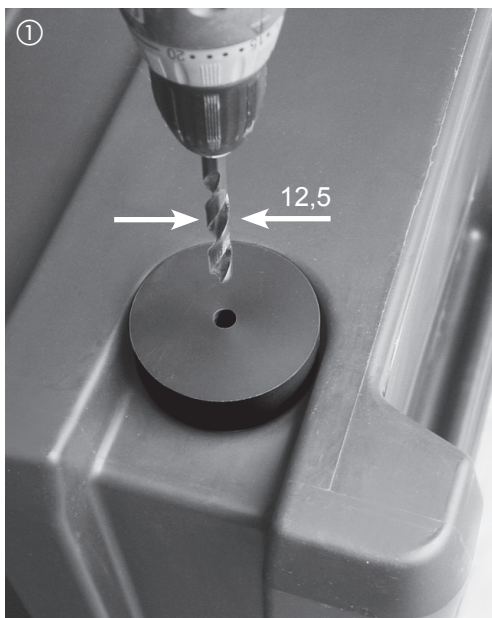

D**GB****F****D**


- ① CEMbox an der Unterseite durch die Befestigungsnocken abbohren (4x).

GB

- ① Locate the round mounting block into the aperture on the bottom of the CEMbox and drill through it into the underside of the CEMbox (4x).

F

- ① Percer le fond du CEMbox PO avec un forêt DN12.5mm (4x) en utilisant les patins de fixation.

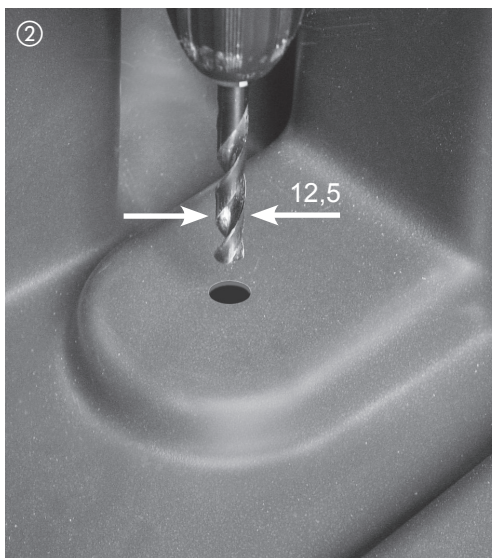**D**

- ② CEMbox mit den 4 Befestigungsnocken auf der Fahrzeuginschrift ausrichten und durchbohren.

GB

- ② Locate the CEMbox, together with the mounting blocks, in the desired location on the vehicle bed and drill through from inside the CEMbox.

F

- ② Ajuster les 4 patins de fixation sur le CEMbox PO et percer le plancher avec un forêt DN 12.5 mm.

D

CEMbox auf der Fahrzeugpritsche
befestigen mit:

4 x 6 Kt-Schraube M 12 x 80

8 x Scheibe A 13

4 x Sicherungsmutter M 12

③ CEMbox von innen

④ Fahrzeugpritsche von unten

GB

Secure the CEMbox in place on the
vehicle bed by means of:

4 x hex bolts M 12 x 80

8 x washer A 13

4 x locknut M 12

③ CEMbox inside view

④ Vehicle bed from underneath

F

Boulonner le CEMbox PO au plateau à l'aide de:

4 x vis M 12 x 80

8 x Rondelles A 13

4 x écrous M 12

③ CEMbox PO vu de l'intérieur

④ Fixations vues de dessous

